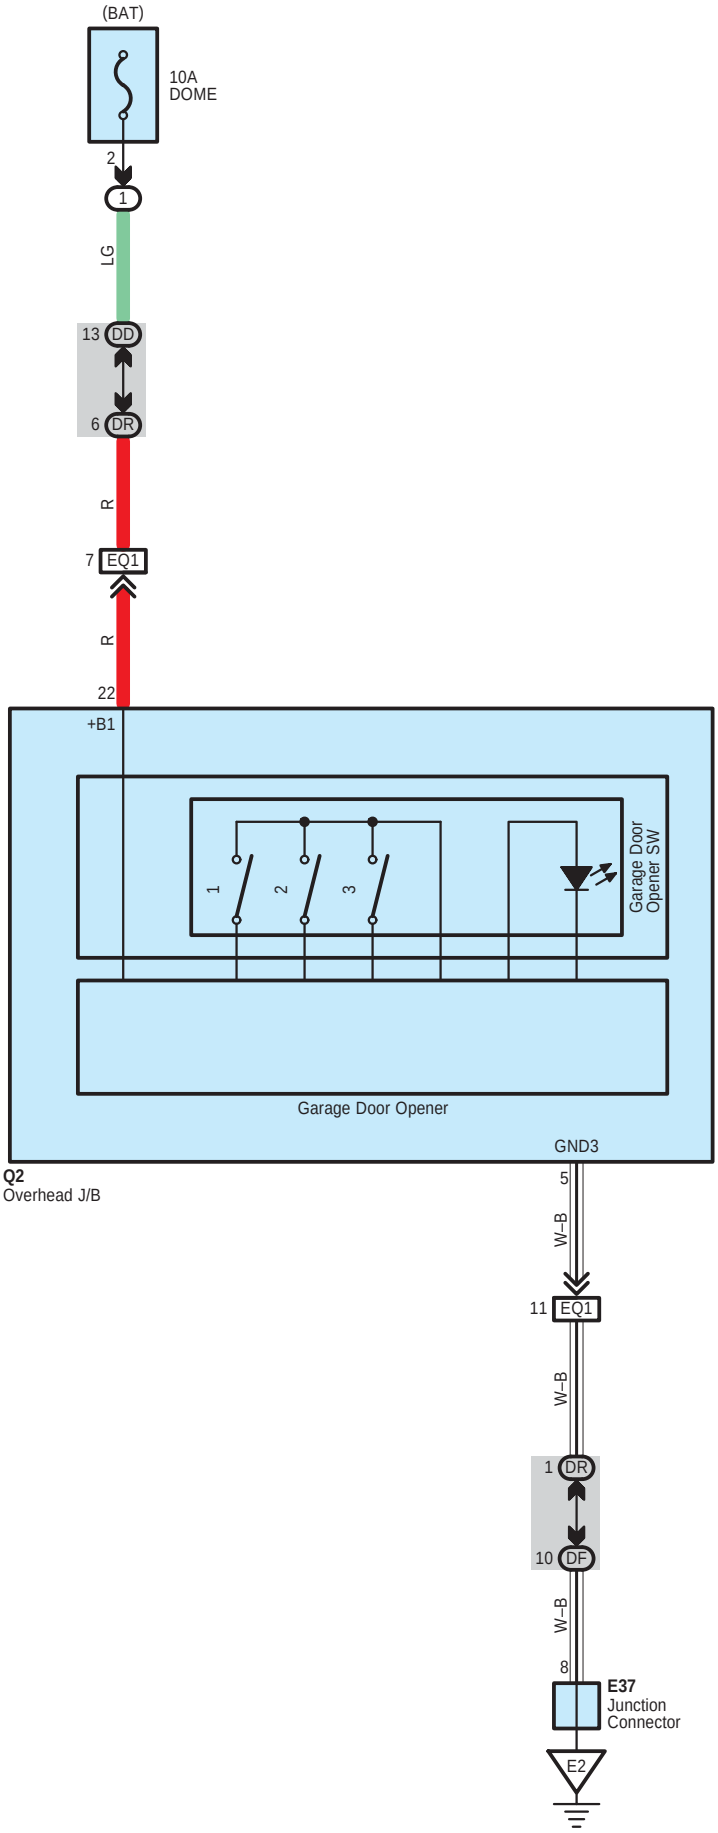
(BAT)
10A
DOME
2
1
LG
13 DD
6 DR
R
7 EQ1
R
22
+B1
1
2
3
Garage Door
Opener SW
Garage Door Opener
GND3
Q2
Overhead J/B
5
W–B
11 EQ1
W–B
1 DR
10 DF
W–B
8
E37
Junction
Connector
E2

: Parts Location

Code	See Page	Code	See Page	Code	See Page
E37	58	Q2	64		

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
DD	30	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
DF	30	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
DR		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EQ1	69	Instrument Panel Wire and Roof Wire (Front Pillar LH)

: Ground Points

Code	See Page	Ground Points Location
E2	69	Instrument Panel Brace LH